


Option 1.

UK: This sensor on the boom is only mounted, if the crane has one or more of the options below:
Otherwise cable 3C must be connected to 3C2.

DK: Denne sensor på vip-armen monteres kun, hvis kranen har en eller flere af optionerne nedenfor:
I alle andre tilfælde forbindes kabel 3C med 3C2.

HSL-E, HSL-Q, QOPS

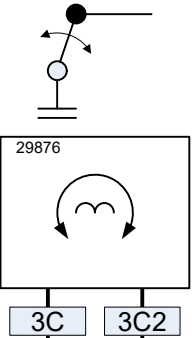


Option 2.

UK: This sensor on the jib is mounted, if the crane has one or more of the options below:
Otherwise a resistor is mounted HMF no. 29486.

DK: Denne sensor på knæk-armen monteres hvis kranen har en eller flere af optionerne nedenfor:
Ellers monteres en modstand HMF nr. 29486.

EVS, QOPS

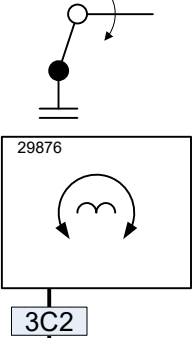

[3C2] 28790 / 29746				
1	SHIELD	GND	1	
2	RD	+	2	
3	BK	-	3	
4	WH	CAN High	4	
5	BU	CAN Low	5	

[3C] 29794				
K131	SHIELD	GND	1	
K131	BK	-	3	
K333	RD	+	2	
K434	BU	CAN Low	5	
K535	WH	CAN High	4	

Revision

Nr.	Date	Sign.
A	16.06.2020	BWK
B	31.08.2020	BWK

Product

RCL5300 & RCL5400

Part

Angle sensors boom and jib, MC

 **Højbjerg Maskinfabrik a/s**
Oddervej 200 - DK-8270 Højbjerg

Date

16.06.2020

Sign.

BWK

Replacing

Drawing nr.

70 21 536 01

Rep. by

Drawing size

A3