

Note:

The cables 83L and 83R connects to the sensors for extension boom out in the opposite side of where they are connected.

