


Note!

UK: Spools in one side activate functions in the opposite side.

DK: Spoler i den ene side aktiverer funktionen i den modsatte side.

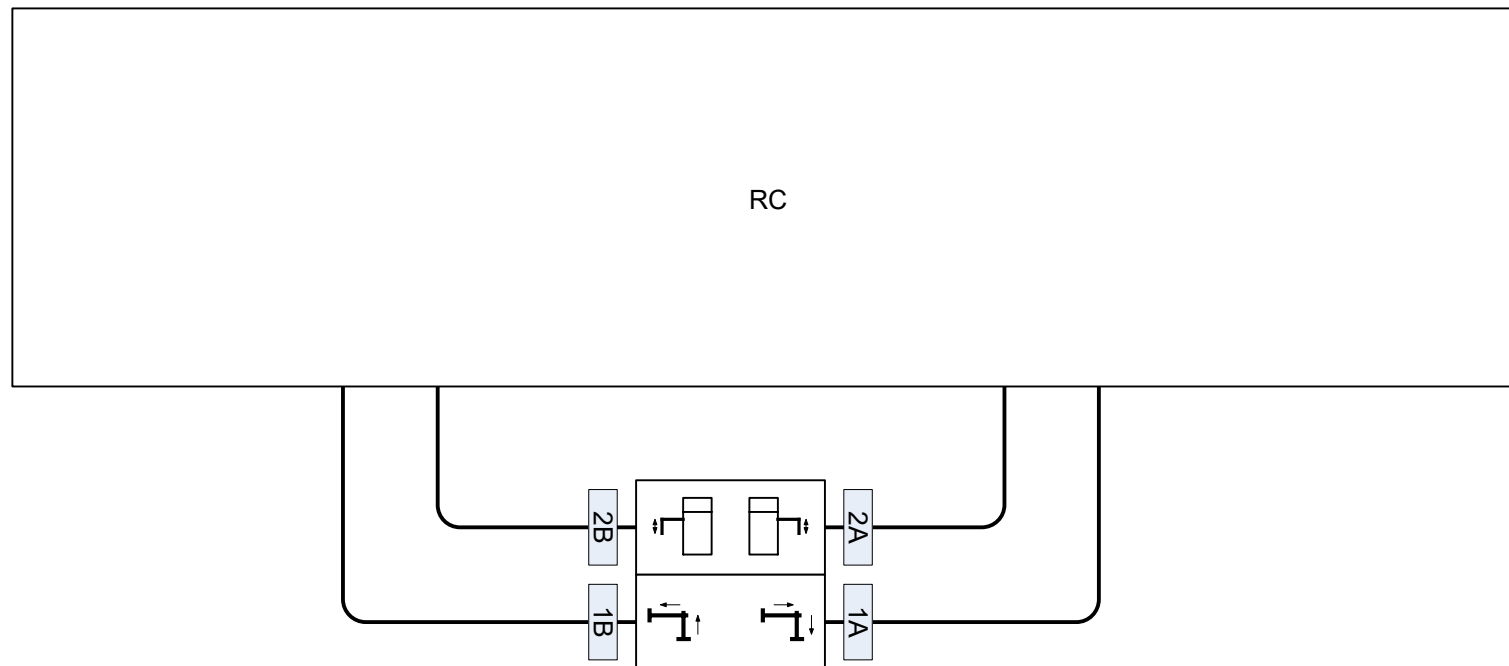

56721				
Cable	Wire	Signal	RC Pin no.	Connector Pin no.
1A	1	PWM +	K1.1	1
	2	GND / 0V	K1.2	2
1B	1	PWM +	K1.3	1
	2	GND / 0V	K1.4	2
2A	1	PWM +	K1.5	1
	2	GND / 0V	K1.6	2
2B	1	PWM +	K1.7	1
	2	GND / 0V	K1.8	2
3A	1	PWM +	K1.9	1
	2	GND / 0V	K1.10	2
3B	1	PWM +	K1.11	1
	2	GND / 0V	K1.12	2
4A	1	PWM +	K1.13	1
	2	GND / 0V	K1.14	2
4B	1	PWM +	K1.15	1
	2	GND / 0V	K1.16	2

Output Config

RCL | FJC | WIC | CIO5070 | RC (Scanreco G1 & Hetronic BMS 1) | RC (Scanreco G2) | CIO5376 | CIO5374

Max Current Global [mA]: 1500 | PWM Start Kick [%]: 2 | PWM Frq. [Hz]: 60 | PWM Dither Frq. [Hz]: 650

G2 PWM Output Pin K1 and K3

	Source	Source Setup	Ignore Dump	Min. Current [%]	Max. Current [%]
PWM 1A, K1.1:	STB_DIR_B	Digital	☒	0	100
PWM 1B, K1.3:	STB_DIR_A	Digital	☒	0	100
PWM 2A, K1.5:	STB_5	Digital	☒	0	100
PWM 2B, K1.7:	STB_7	Digital	☒	0	100
PWM 3A, K1.9:	None	Digital	☒	0	100
PWM 3B, K1.11:	None	Digital	☒	0	100
PWM 4A, K1.13:	None	Digital	☒	0	100
PWM 4B, K1.15:	None	Digital	☒	0	100
PWM 5A, K3.1:	None	Digital	☒	0	100
PWM 5B, K3.3:	None	Digital	☒	0	100

Remote Control Advanced

Lever 1-6 | Lever 7-12

Lever Function 1-6

Funktion: Crane | Stabilizer Cont

Mode: Crane | Stb.

Activation: Std | Std

(and activation): Off | Off

Lever1: None | None

Lever2: Slew | None

Lever3: Boom | None

Lever4: Jib | Stb.5

Lever5: Ext | Stb.7

Lever6: Rotator | None

Lever7: Grab | None

Lever8: None | None

Valid: Valid | Valid

Wanted: Wanted | Wanted

Invert

Revision			Product	Date	Drawing size
Nr.	Date	Sign.		Sign.	
A	10.05.2012	BWK	RCL5300 & RCL5400	BWK	A3
B	25.02.2013	BWK			
C	27.08.2020	BWK			
			Part	Replacing	
				Drawing nr.	
				70 21 566 02	
				Rep. by	
				Højbjerg Maskinfabrik ^a / _s	
			Oddervej 200 - DK-8270 Højbjerg		